


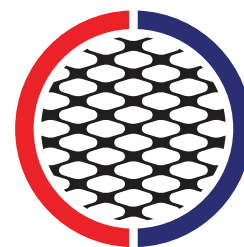

Ford PI Utility Cargo Barrier 2011-2019



CUSTOM CAGE

**Ford PI Utility
Cargo Barrier
2011-2019**



INSTALLATION GUIDE



Ford PI Utility Cargo Barrier 2011-2019

YOU WILL NEED:

A partner to assist
Installation guide
Socket Wrench Set
Drill with 7/16 drill bit
Impact
Utility Knife
Ratchet
Center punch

Masking tape
Panel tools/Screwdriver
Cutters

PARTS LIST

A. Passenger Side Cargo Barrier Bracket
B. Driver Side Cargo Barrier Bracket
C. Cargo Barrier
D. Floor Braces
E. Pre-Slit Foam
F. Hardware and Installation Guide

There was no picture for this guide either on the existing guide or taken during our time together.



Ford PI Utility Cargo Barrier 2011-2019

INSTALLATION INSTRUCTIONS

DO NOT TIGHTEN ANY BOLTS UNTIL ASSEMBLY IS COMPLETE!

1. Install cargo barrier bracket **loosely** to the cargo barrier passenger side. The Custom Cage logo on cargo barrier faces the front of vehicle.
2. Install cargo barrier bracket **loosely** to the cargo barrier driver side.
3. Place cargo barrier inside rear of vehicle and hold to ceiling and against rear seat backs.
4. Mark the plastic moldings on both sides where the brackets will attach.
5. Remove cargo barrier and set aside. Remove the lower plastic from the driver's side rear and door area. Remove the upper molding using a 7mm socket to remove 1 bolt. Molding will pull out from the bottom and unlock from the headliner.
6. Install driver side inner molding bracket with 1" tap screw. Be sure to line up the mark on molding and the bracket.
7. Reinstall the upper molding first, then the lower plastic.
8. With a 7/16 drill bit, drill out the holes you marked for the side brackets.
9. Install cargo barrier with tap screws. Do not overtighten.
Use Caution: Passenger/prisoner side has very thin metal behind the plastic. **Be careful!**
10. Attach the floor braces to the cargo barrier and tap screw to the floor.