




Chevrolet Silverado Crew 2019+

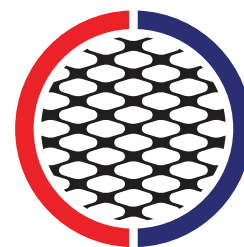

CUSTOM CAGE

**Chevrolet Silverado Crew
2019+**



CHEVROLET

INSTALLATION GUIDE

Chevrolet Silverado Crew 2019+


YOU WILL NEED:

A partner to assist
Installation guide
Socket Set
Impact
Ratchet
Cutters

PARTS LIST

A. Upper Side Screen
B. Lower Side Screen
C. Front Screen
D. Headrest Bracket
E. Seat Rail Bracket
F. Clamp for B-Pillar Handle Bracket
G. B-Pillar Handle Bracket
H. Pre-Slit Foam (not pictured)

I. Hardware and Installation Guide
(not pictured)

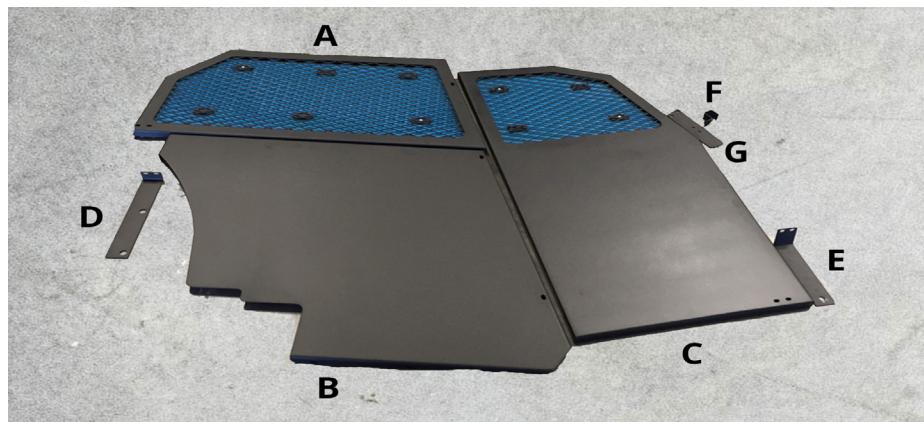

Chevrolet Silverado Crew 2019+

INSTALLATION INSTRUCTIONS

DO NOT TIGHTEN BOLTS UNTIL ASSEMBLY IS COMPLETE!

1. Slide front passenger seat all the way forward. Place lower side screen between the seat split, seatbelt carrier plastic and to the rear.
2. Remove center headrest.
3. Attach headrest bracket to upper side screen. Note: the L-partition of the bracket will be on passenger side of cage.
4. Bolt upper side screen to lower side screen.
5. Install foam tube to upper side screen.
6. Re-install headrest through the bracket.
7. Remove seat rail plastic covers on outside rear - closest to the door.
8. Remove seat rail bolt and install seat rail bracket. Replace bolt but do not tighten.
9. Bolt front screen to side screen and lower bracket that was just installed.
10. Bolt upper front screen bracket on front screen - bolt inside the B-Pillar handle. If needed, use small piece of foam tubing behind the "hook" portion of the B-Pillar bracket. Tighten all bolts.
11. Install foam tube with zip ties to upper portion of front screen. Cut off any excess.