


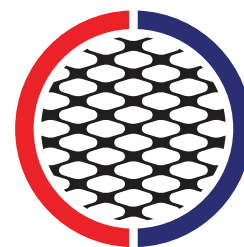

Chevrolet Tahoe 2015-2020



CUSTOM CAGE

Chevrolet Tahoe
2015-2020



CHEVROLET

INSTALLATION GUIDE

Chevrolet Tahoe 2015-2020


YOU WILL NEED:

A partner to assist
Installation guide
Socket Set
Drill with 5/32 drill bit
Impact
Utility Knife
Ratchet
Center punch

Masking tape
Panel tools
Cutters

PARTS LIST

A. Passenger Side Inner Molding Block	G. Front Screen Upper Bracket (may come preassembled)
B. Driver Side Inner Molding Block	H. Side Screen Floor Bracket (Kick Plate)
C. Upper Cargo Barrier	I. Front Screen Lower Bracket (L-Bracket)
D. Side Screen	J. Pre-Slit Foam (not pictured)
E. Front Screen	K. Hardware & Installation Guide
F. Front Screen Upper Bracket (may come preassembled)	

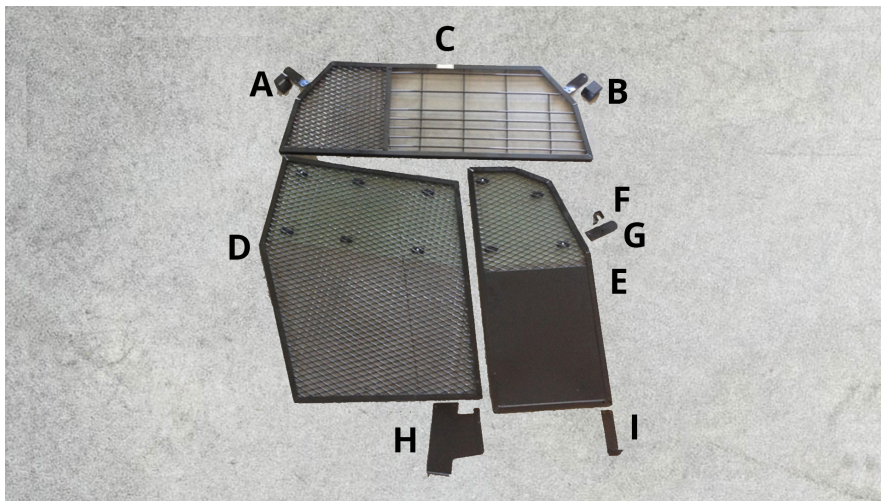

Chevrolet Tahoe 2015-2020

INSTALLATION INSTRUCTIONS

DO NOT TIGHTEN ANY BOLTS UNTIL ASSEMBLY IS COMPLETE!

1. With the Custom Cage logo facing front of the vehicle, **loosely** install the cargo barrier brackets also facing forward.
2. With your partner holding barrier to ceiling and against the rear seat backs, mark side molding plastic where barrier will attach. Use masking tape to mark X/Y axis on headliner and door edge. Do this on both sides.
3. Remove upper plastic from both sides of the C-Pillar. Align inner molding blocks with the tape marks for correct location. Secure using tap screws.
4. Replace plastic.
5. Drill out the marks on plastic and through the blocks on both sides.
6. Install cargo barrier securing with tap screws. Do not overtighten.
7. Place side screen in the vehicle between split in the seats.
8. Slide foam onto side screen and then install side screen floor bracket to side screen to hold everything in place.
9. Install upper front screen bracket to passenger side grab handle.
10. Install front screen to side screen and upper side screen bracket.
11. Install front screen lower bracket to front screen.
12. Slide foam over front screen.
13. Tighten all bolts.
14. Secure front screen lower bracket to the floor with tap screws.
Double check under the vehicle for clearance.
15. Tighten foam using zip ties. Cut off any excess.