


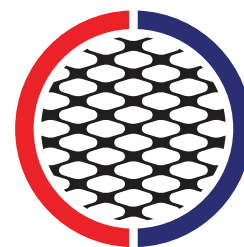

**Dodge Charger 2015+**



**CUSTOM CAGE**

**Dodge Charger**  
**2015+**



**INSTALLATION GUIDE**


## Dodge Charger 2015+

### YOU WILL NEED:

A partner to assist	T-20
Installation guide	T-47
Socket Set	
Drill	
Impact	
Ratchet	
Panel tools	
E-Torx 12	

### PARTS LIST

- A. Rear Deck Brackets
- B. Side Screen
- C. Floor Bracket
- D. Front Screen
- E. Upper B-Pillar Bracket
- F. Seat Rail Bracket
- G. Pre-Slit Foam
- H. Hardware and Installation Guide

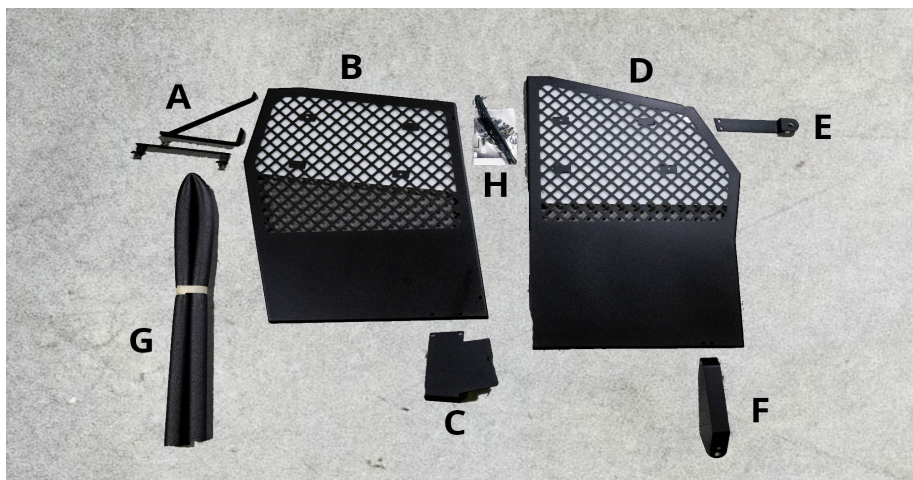

## Dodge Charger 2015+

### INSTALLATION INSTRUCTIONS

**DO NOT TIGHTEN ANY BOLTS UNTIL ASSEMBLY IS COMPLETE!**

1. Remove passenger and center cargo hook/childseat plastic covers.
2. Remove passenger side B-Pillar post plastic and top bolt for seatbelt adjuster bar.
3. Remove right rear seat rail bolt from passenger seat (closest to passenger side B-Pillar).
4. Install rear deck bracket bar between the cargo hooks. Factory holes are behind the cargo hooks. You may have to ream the holes slightly. Fasten with lock washers and nut from the trunk side. **Loosely** install rear window bracket to cross bar. Double check inside the trunk area to ensure that nothing is obstructing your drilling.
5. In the vehicle, attach the rear deck bracket (A) with sidescreen (B). Slide foam tubing over the top of the sidescreen. Attach floorplate.
6. In the vehicle, install upper bracket to the top bolt of the seatbelt adjuster and tighten. Then attach seat rail bracket to bolt on rear passenger seat rail. Replace plastic.
7. Install front screen to sidescreen and attach upper bracket and seatrail bracket to front screen.
8. Install foam tube to front screen.
9. Tighten all bolts.
10. Finish installing foam tube with zip ties. Installation is complete.