




**Dodge Durango Cargo Barrier 2011+**

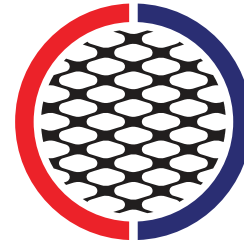

**CUSTOM CAGE**

**Dodge Durango  
Cargo Barrier  
2011+**



**INSTALLATION GUIDE**



## Dodge Durango Cargo Barrier 2011+

### YOU WILL NEED:

A partner to assist  
Installation guide  
Socket Set  
Drill with 5/32 drill bit  
Impact  
Ratchet  
Center punch  
Masking tape

Panel tools/Screwdriver  
Cutters

### PARTS LIST

A. Cargo Barrier Brackets  
B. Block Brackets  
C. Cargo Barrier  
D. Floor Braces  
E. Hardware and Installation Guide



## Dodge Durango Cargo Barrier 2011+

### INSTALLATION INSTRUCTIONS

**DO NOT TIGHTEN BOLTS UNTIL ASSEMBLY IS COMPLETE!**

1. With the Custom Cage Logo on the cargo barrier facing the front of the vehicle, **loosely** install the cargo barrier brackets to rear cargo barrier. Brackets are side specific to conform with plastic.
2. Place cargo barrier in the rear of the vehicle and hold against the seats and to the roof. Mark the plastic pillar post where the brackets will mount. This will be roughly 2.5" down from the headliner.
3. Remove the pillar plastic from both sides and install the 1.5x1.5x2" block brackets to the pillar post with 2 tap screws each. Remove any plastic tabs if need be. Be certain the brackets line up with the marks and do not interfere with the plastic or fins.
4. Replace plastic on both sides.
5. Drill the holes you marked and **loosely** install the cargo barrier.
6. Attach the floor braces to the cargo barrier and tap screw to the floor.
7. Tighten all bolts.