




Ford F-Series 2015+



**Ford F-Series
2015+**

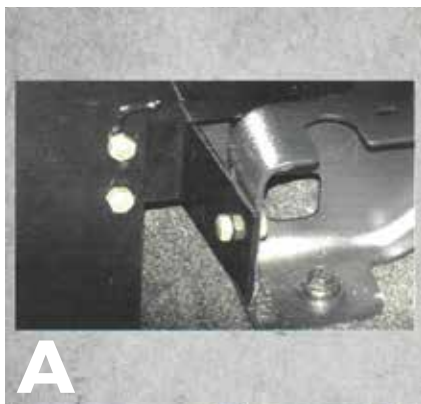

INSTALLATION GUIDE


Ford F-Series 2015+

YOU WILL NEED:

A partner to assist
 Installation guide
 Socket Set
 Impact
 Ratchet
 Panel tools/Screwdriver
 Cutters/Trim Tool

PARTS LIST

A. Upper Side Screen	I. Pre-Slit Foam
B. Lower Side Screen	J. Hardware and Installation Guide
C. Center Headrest Bracket	
D. Lower Side Screen Bracket	
E. Stabilizing 2.5" Bracket	
F. Front Screen	
G. Front Screen Upper Bracket	
H. Seat Rail Bracket	

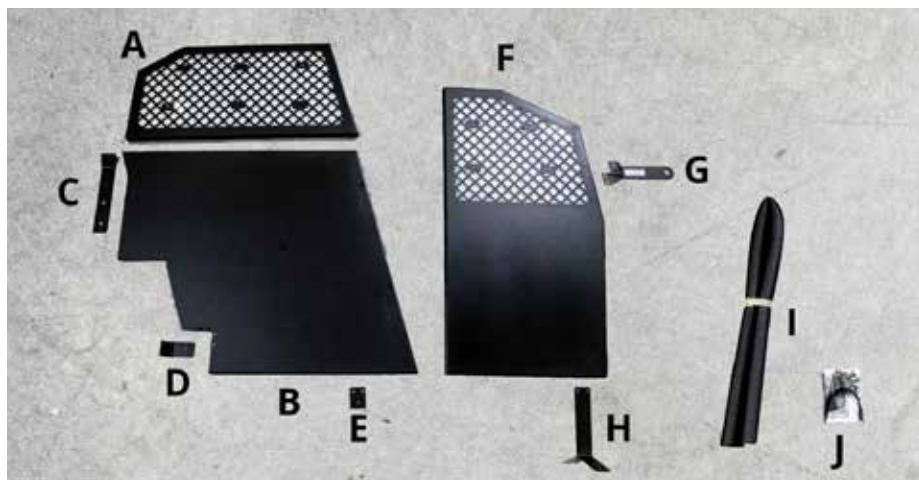

Ford F-Series 2015+

INSTALLATION INSTRUCTIONS

DO NOT TIGHTEN ANY BOLTS UNTIL ASSEMBLY IS COMPLETE!

1. Flip both rear seats up. Move passenger seat all the way forward.
2. Install 2.5" bracket to side screen lower front.
3. Install the center headrest bracket by removing the center headrest. Place the headrest through the holes in the bracket and re-install the headrest. The "Z" shape should be facing the cage and line up with holes pre-punched in the lower side screen. **Note: This bracket adds reinforcement to the overall partition. The use of this bracket will limit seat range mobility.**
4. Place lower side screen in rear of vehicle and slide between seats in the seat split.
5. Attach lower side screen bracket to seat frame on the 2/3rds side and to lower rear of side screen. (Photo A)
6. Attach upper side screen to lower side screen.
7. Remove outside rear seat rail bolt from front passenger seat. Install seat rail bracket under the seat rail and **loosely** replace seat rail bolt.
8. Attach upper front screen bracket and foam tube to front screen.
9. Remove passenger seatbelt bolt and place front screen in vehicle.
10. Attach upper front screen bracket to seatbelt bolt.
11. Attach front screen to seat rail bracket.
12. Adjust the position of the partition if needed and fasten all bolts.
13. Finish the foam tube. Tap screw the stabilizing 2.5" bracket to the floor.