


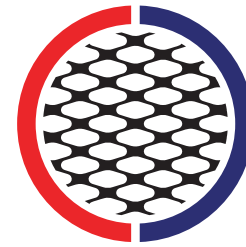

Ford PI Utility Cargo Barrier 2020+



CUSTOM CAGE

Ford PI Utility Cargo Barrier 2020+



INSTALLATION GUIDE

Ford PI Utility Cargo Barrier 2020+


YOU WILL NEED:

A partner to assist
Installation guide
Socket Set
Drill with 5/32 drill bit
Impact
Ratchet
Center punch
Masking tape

Panel tools/Screwdriver

PARTS LIST

A. Passenger Side Inner Molding Block (1.25"x1.25")
B. Driver Side Inner Molding Block (1"x1")
C. Passenger Cargo Barrier Bracket
D. Driver Side Cargo Barrier Bracket
E. Upper Cargo Barrier
F. Lower Cargo Barrier
J. Hardware and Installation Guide (not pictured)

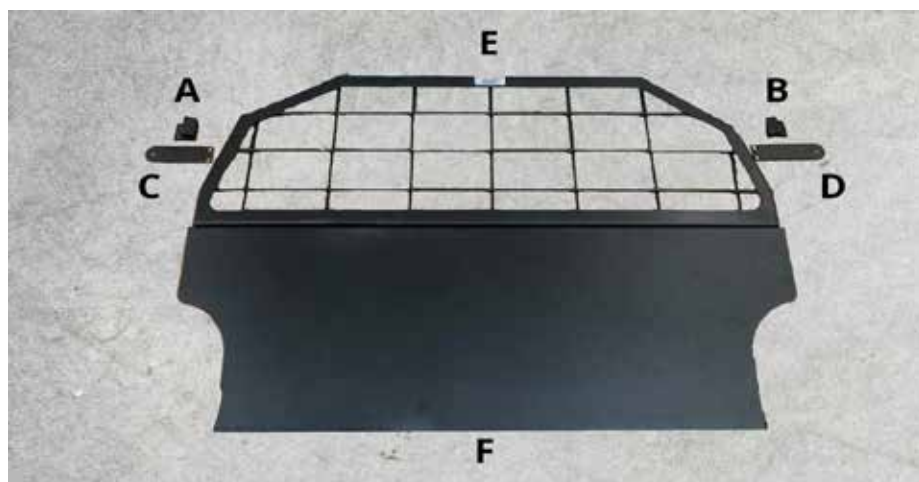

Ford PI Utility Cargo Barrier 2020+

INSTALLATION INSTRUCTIONS

DO NOT TIGHTEN ANY BOLTS UNTIL ASSEMBLY IS COMPLETE!

1. Install cargo barrier bracket **loosely** to the upper cargo barrier passenger side. The Custom Cage logo on cargo barrier faces front of vehicle.
2. Install cargo barrier bracket **loosely** to the cargo barrier driver side.
3. Loosen the lower rear side plastic from both driver and passenger side. Remove the upper C-Pillar plastic on both sides. There is a metal tab on the top portion of the plastic. Use a trim tool to carefully remove it from the C-Pillar.
4. Begin installation on the driver side. Install driver side inner molding block (1"x1") with tap screws. Ensure rear top corner lines up with the seam. (Photo B)
5. Be sure to line up the mark on molding and the bracket. Mark X/Y axis on headliner and door edge with masking tape.
6. Re-install upper and lower molding.
7. On the passenger side, repeat steps 3 through 6.
8. Install the rear cargo barrier aligning brackets with the inner molding blocks and drill 5/32 hole.
9. Secure using the tap screws. **Do not overtighten.**
10. Driver Side – use a 1" tap screw
11. Passenger Side – use a 1.5" tap screw
12. Install the lower cargo barrier to the upper cargo barrier.
13. The lower cargo barrier secures to the floor with tap screws.
14. Tighten all bolts.